


## Remote Control Programming Instructions for the Open Sesame Door Operator

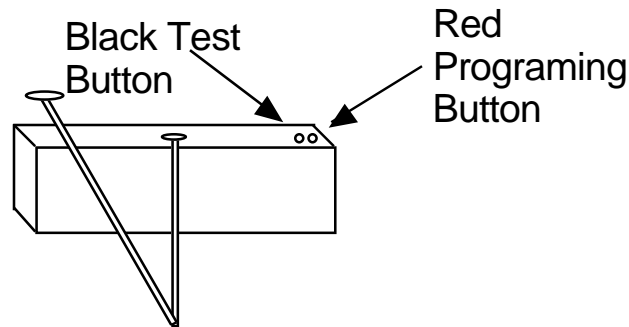

### **For most remote controls:**

- 1) Locate the red button on top of the door operator and push it momentarily (1 second).
- 2a) If using any wheelchair mounted or handheld remote control, or wall pushpad, push and hold the button on the remote control for 4 seconds (do this within 30 seconds of doing step 1). Then release and push the remote control button again and the unit should respond.
- 2b) If using a LiftMaster **66LM** keyless entry pad, enter the new 4-digit code on the keypad and then hold the "ENTER" button for 4 seconds (within 30 seconds of doing step 1). Then release and push the "ENTER" button again and the unit should respond. **Note:** The old code will now no longer work.

### **If using a LiftMaster 387LM keyless entry pad:**

- 1) Press \* and # keys together until keyless entry pad stops flashing.
- 2) Enter the 4-digit code you want to use, press #.
- 3) Enter "4", press #.
- 4) Press and release the red programming button on the Open Sesame door operator.
- 5) Enter your 4 digit code again and push the 0 key for 4 seconds within 30 seconds of step (4).
- 6) To test and use, wait until light turns off, enter your 4-digit code and press the 0 key.

If opener does not function, repeat programming.

If this does not work, call for technical assistance.

NOTE: If you lost a remote control and no longer wish it to work, push and hold the red programming button for 10 seconds, then reprogram all other remote controls and keypads.

Open Sesame Door Systems Inc.  
1-800-673-6911  
9:00 AM - 6:00 PM  
(PACIFIC TIME)