


# ENABLING AND DISABLING “PARK” MODE ON MODEL 200 DOOR OPERATORS.

**TOP RIGHT  
OF THE  
CIRCUIT  
BOARD**

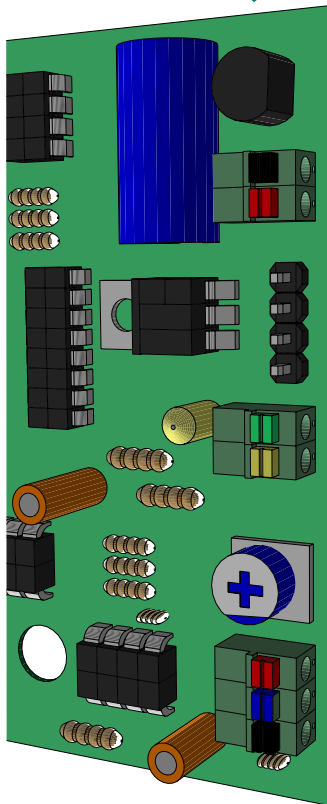

**4 PINS**

**“PARK”  
ENABLED**



**“PARK”  
DISABLED**



**JUMPER  
POSITION  
SLIDE BLUE  
JUMPER OVER  
PAIR OF PINS  
AS SHOWN**

Enabling “park” mode allows the door to be stopped indefinitely in the open position by pushing the remote control a second time after the door opens. Close the door by pushing the button a third time.