

## REMOTE CONTROL PROGRAMING INSTRUCTIONS

For light commercial Open Sesame Door Operators Model 233  
(sold before 07/2014, with GREY antenna wire)

1. With the cover off of the Open Sesame operator, locate the radio receiver circuit board which is connected to the black "test" and red "program" pushbutton switches. The board has a green LED light near the edge of the board. Push and HOLD the red programing button on the Open Sesame operator until this green light flashes once (should be within 4 seconds). Then release the red button.
2. Push for 1 second (then release) the square pushpad or transmitter button. Door will activate and open. For Keypads, enter default code "1234".
3. Now wait 6 seconds. (one thousand one, one thousand two, etc)
4. Push the square pushpad or transmitter button again. Your pushpad or transmitter is now programed. For keypad, wait for light to turn off on keypad, then enter "1234" again and the door should open.

To CHANGE the keypad 4-digit code:

1. Enter ##1234 on keypad
2. Enter desired 4-digit code, then
3. Enter 1##
4. Wait a few seconds
5. Enter \*\*
6. Push and HOLD the red programing button on the Open Sesame operator until the green light flashes once (should be within 4 seconds). Then release the red button.
7. Enter 4-digit code on keypad again and the door should open.

NOTE: To reset code to factory setting of "1234", do the following:

1. Disconnect battery
2. While holding down any button, reconnect the battery
3. Continue holding button for 5 seconds