

## REMOTE CONTROL PROGRAMING INSTRUCTIONS

All current 433 MHz units with green (or green tipped) antenna wire



### Standard Remote Control Transmitter

This transmitter is a visor transmitter which may be mounted below the wheelchair armrest or a side panel. A sensitivity paddle is included to make it easier to push.



1. Press momentarily and release the red program button located on top of the Open Sesame unit (1 second).
2. Within 15 seconds, press and hold the button on the transmitter you wish to use for 3 seconds or for Touchpad, touch the pad momentarily with a few fingers or your palm. Now your remote is programmed.

### Keypad

#### If you want to change the 4-digit keypad code:

1. Enter ##xxxx, where xxxx is your current 4-digit code (factory default is 1234).
2. Enter your new 4-digit code.
3. Enter 1##
4. Wait a few seconds
5. Enter \*\*. Your new code is now ready for use.

#### NOTE: To reset code to factory setting of "1234", do the following:

1. Disconnect battery
2. While holding down any button, reconnect the battery
3. Continue holding button for 5 seconds, then release.

#### TO ERASE ALL TRANSMITTER CODES:

1. Press and then release the receiver programming button five times quickly (within 3 sec. time).
2. The light will flash 5 times, indicating that ALL remotes have been erased from the receiver memory. If you have problems programming, there is a green indicator light that can be observed inside the unit with the cover off, that can be used for troubleshooting. It is on the radio receiver board on back of the case on right side.

**For programmed transmitters the following applies:** The receiver light will flash 5 times, within 2 seconds when a programmed transmitter button has been pressed and released. The receiver light will continue to flash when a transmitter button has been pressed and held down. The receiver light will stop flashing when the transmitter button has been released.

**For non-programmed transmitters:** The receiver light will blink rapidly (10 times within 2 seconds) when a non-programmed transmitter button is pressed. The receiver light will continue to blink until the non-programmed transmitter button is released.

If the radio receiver light does not flash at all when the remote control button is pushed, the first thing to suspect is a dead battery in the remote control.

NOTE: For assistance programming early Model 233 units with GRAY antenna wire, contact Open Sesame.



## REMOTE CONTROL PROGRAMING INSTRUCTIONS

For earlier model Open Sesame units with gray (390MHz) or purple (315 MHz) antennas

### Programming the LiftMaster 890MAX keychain mini remote:


1. Press and hold the program button on the remote control with a paperclip or safety pin until the LED on the front turns on.
2. Press and release the remote control button you wish to use:
  - a) 2 times if you have a purple antenna
  - b) 4 times if you have a gray antenna
3. To exit program mode, press any remote control button except the one that was just programmed.
4. Press and release the red program button on the Open Sesame.
5. Press the remote control button programmed in step 2 several times until the door opens.



**PROGRAM  
BUTTON**

#### To change the battery:

Split the case open (with a screwdriver)  
Replace the 2032 battery, then  
snap the case back together.

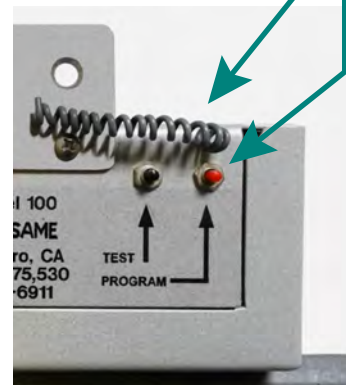


### Programming the LiftMaster 893MAX remote:

1. Press and hold the program button on back until the LED on the front of the remote turns on.
2. Press and release the remote control button you wish to use:
  - a) 2 times if you have a purple antenna
  - b) 4 times if you have a gray antenna
3. To exit program mode, press any remote control button except the one that was just programmed.
4. Press and release the red program button on the Open Sesame.
5. Press the remote control button programmed in step 2 several times until the door opens.



#### To change the battery:

Split the case open (with a screwdriver),  
first in the middle, then both ends.  
Replace the 2032 battery, then snap  
the case back together.

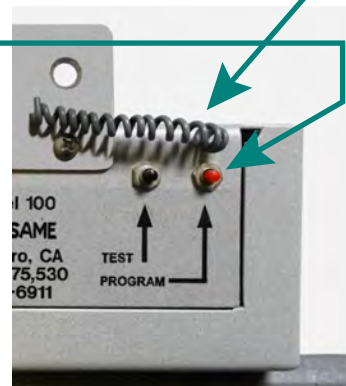

TITLE **REMOTE CONTROL  
PROGRAMING  
INSTRUCTIONS**

MODEL

PAGE **2 OF 3**

## REMOTE CONTROL PROGRAMING INSTRUCTIONS

Miscellaneous Remotes for Earlier 390MHz and 315MHz units - gray or purple antenna wires.


### If using the LiftMaster 892LT 2-Button Remote:

Note: If using this remote with older Model 100 operators (sold before Sept 2012), do an erase procedure first by holding down the Open Sesame red program button for 10 seconds. This will erase the memory of all programmed remote controls. Old remote controls may not be compatible with this remote control.

The easiest way to program this is with the cover on the Open Sesame off so you can observe the yellow indicator light on the radio receiver circuit board inside. This is the board in the back on the right side (under the Top Board).

**Programming Button RED**

**Test Button BLACK**

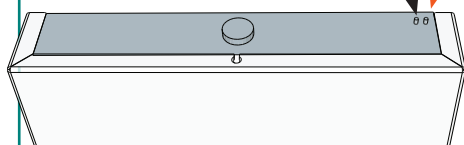

- 1) Remove the battery cover from the remote control and locate the program button (next to the battery).
- 2) Press the program button on the remote until the light on the remote control turns on.
- 3) Press and release the red program button on the Open Sesame door operator.  
The yellow light on the edge of the radio receiver circuit board will turn on and stay lit.
- 4) Slowly press and release the button on the remote control you want to use repeatedly until the yellow light on the radio receiver board flickers. DO NOT push the remote control button again.
- 5) Press the program button on the remote control again until the light on the remote turns off.

### For the 371L, 377LMM (key-less entry pad), and other older remote controls like the 81LM, 62LM (except above listed 892LT):

- 1) Locate the red button on top of the door operator and push it momentarily (1 second).
- 2) Push and hold the button on the remote control for 5 seconds, or enter the 4-digit code and hold the enter button for 5 seconds (do this within 30 seconds of doing step 1. Then release and push the remote control button (or enter button) again and the door should open.

### If using a LiftMaster 387LM keyless entry pad for older systems:

- 1) Press \* and # keys together until keyless entry pad stops flashing.
- 2) Enter the 4-digit code you want to use, press #.
- 3) Enter "4", press #. NOTE: This works with other 390MHz non-security plus remotes.  
If you are using it with 390MHz security plus devices like the 892LT, use the digit "2", then #.
- 4) Press and release the red programming button on the Open Sesame door operator.
- 5) Enter your 4 digit code again and push the 0 key for 4 seconds within 30 seconds of step (4).
- 6) To test and use, wait until light turns off, enter your 4-digit code and press the 0 key.

**NOTE: The 387LM can only be used with one 4-digit code.**

If you want to change the code:

- 1) Enter your old code and press the \* key, then enter the new code and press the \* key.

### If using the 877MAX keyless entry pad for older systems:

- 1) Press and hold the \* and the # until the keypad lights stop flashing and turns solid.  
Do steps 2,3,4 back to back don't wait for the light to turn off or for it to stop flashing.
- 2) Enter the 4-digit code you want to use, then press the # button.
- 3) Press and release Enter 2x if you have a purple antenna wire (on the Open Sesame), 4x if you have a grey antenna wire.
- 4) Press and release 0 (If done in the correct timing the keypad lights should turn off promptly after pressing and releasing 0).
- 5) Press and release the red programming button on the Open Sesame door operator.
- 6) Enter your 4 digit code again and press and hold the Enter button for 5 seconds twice.
- 7) To test and use, wait until light turns off, enter your 4-digit code and press Enter.

**NOTE: The 877MAX can only be used with one 4-digit code.**

If you want to change the code perform the above steps again using the new code.

**NOTE: TO  
ERASE ALL  
OLD PRO-  
GRAMING,  
HOLD THE  
RED BUTTON  
DOWN FOR  
10 SECONDS**

TITLE **REMOTE CONTROL AND  
PUSH PAD PROGRAMING  
INSTRUCTIONS**

MODEL

PAGE **3** OF **3**