


# RESIDENTIAL INSTALLATION WIRING DIAGRAM USING SUPPLIED WIRING KIT

*(for applications without electric strikes, remove green/yellow wires from telephone jack)*

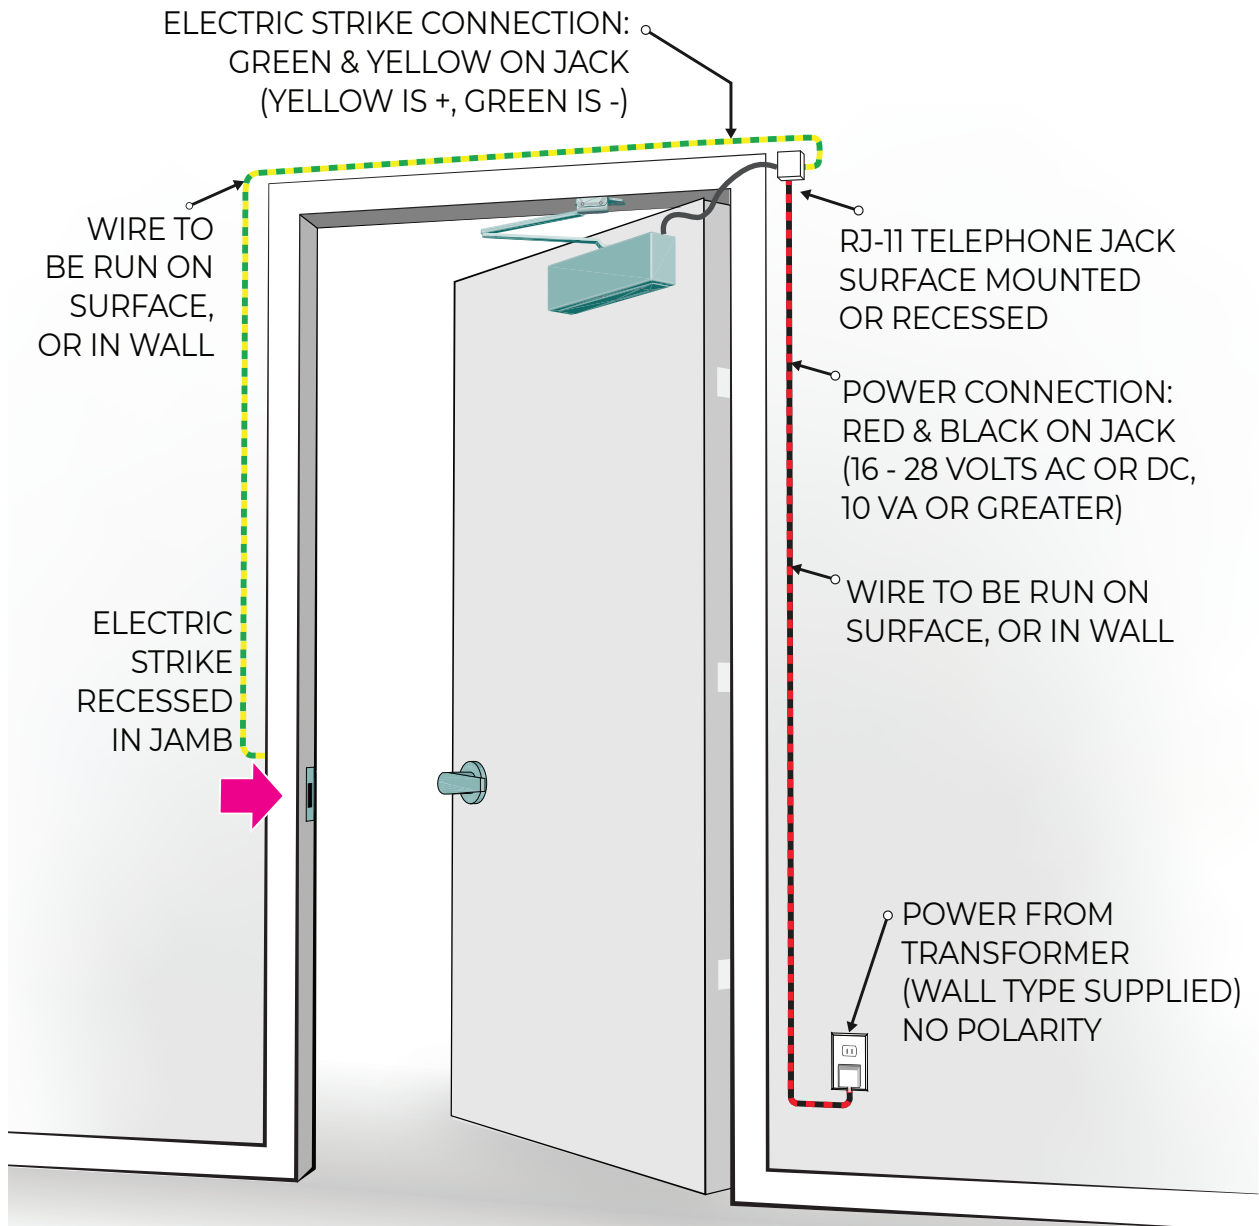

NOTE:  
AN EXISTING DOORBELL  
TRANSFORMER MAY BE USED IF  
THE OUTPUT IS 16 TO 28 VOLTS